

BOY FROZEN TO POLE

Please check that you have all parts. (Located in attached bag)

- 4 ground stakes
- 1 pkg. of asst. color clips (replacement)
- 3 Wing bolts
- 3 Wing nuts
- 1 gray 2 point controller

Unfold display being careful not to stretch any attached wires. There are 2 hinges on the display. Attach two small metal plates at hinge together by screwing wing bolt into metal plates to hold up display. Attach ground stakes by screwing them into the bottom provided slots. You may need an adjustable wrench.

Push ground stakes gently into the ground. You can do this with your foot and using a back and forth motion to inch each side gradually into the ground.

1. Plug Pole section (unmarked plug) into an extension cord. (Not provided).
2. Plug the Boy body into an extension cord. (unmarked plug on foot)
3. Plug controller into an extension cord.
4. There are 2 plugs coming from the Boy hand labeled Green 1 and Red 2. Plug the Green 1 into the Green 1 on the controller. Plug the Red 2 into the Red 2 on the controller.

Adjust speed to your liking

For the best look, straighten clips. Also, if you live in an area with lots of rain or snow, you may want to take extra precaution to cover your controllers.

