

CANDY CANE WINDMILL

Please check that you have all parts. (Located in attached bag)

- 2 ground stakes
- 1 wing bolt
- 1 pkg. of asst. color clips (replacement)
- 1 gray 3 point controller

Unfold display being careful not to stretch any attached wires. Attach two small metal plates at hinges together by screwing wing bolt into metal plates to hold up display.

Attach ground stakes by screwing them into the bottom provided slots.

1. Push ground stakes gently into the ground. You can do this with your foot and using a back and forth motion to inch each side gradually into the ground.
2. Plug windmill bottom (not candy canes) into an extension cord. (Not provided).
3. Plug controller into an extension cord.
4. There are 3 plugs coming from the Candy canes labeled Green 1 and Red 2 and Yellow 3.
5. Plug the Green 1 into the Green 1 on the controller. Plug the Red 2 into the Red 2 on the controller, the Yellow 3 into the Yellow 3 on the controller.
6. Adjust speed to your liking.

For the best look, straighten clips. Also, if you live in an area with lots of rain or snow, you may want to take extra precaution to cover your controllers.

