

CHRISTMAS ANGEL

Please check that you have all parts. (Located in attached bag)

- 1 wing bolt
- 2 stakes
- 1 pkg of asst. color clips (replacement)
- 1 gray 2 point controller

1. Unfold display being careful not to stretch any attached wires. Attach two small metal plates at hinges together by screwing wing bolt into metal plates to hold up display. Christmas Angel may possibly need extra support which is not included. You can do this with an extra stake placed behind the display, driven into the ground, and tied to the frame using a twist tie or a cable tie.
2. Attach ground stakes by placing them into provided slots. Then tighten with provided wing nuts. Note: You may need to twist the stake rather than the wing nut.
3. Push ground stakes gently into the ground. You can do this with your foot and using a back and forth motion to inch each side gradually into the ground.
4. Plug Angel body into an extension cord. (Male plug not marked.)
5. Plug the controller into an extension cord(not included.)
6. There are two plugs coming from the wings each marked Green 1 and Red 2. Plug Green 1 into Green 1 on the controller. Plug Red 2 into Red 2 on the controller.
7. Adjust speed to your liking. Straighten clips for best appearance.

