

# Christmas Coaster Instructions

Please check that you have all parts. (Located in attached bag)

- 16 ground stakes
- 1 pkg of asst. color clips (replacement)
- 1 gray 3point controller
- 38 wing bolts
- collapsible support pole

Take entire display out of box. Attach ground stakes by screwing them into the bottom provided slots. You may need an adjustable wrench. Push ground stakes gently into the ground. You can do this with your foot and using a back and forth motion to inch each side gradually into the ground. This display may need extra support which is not included.

1. Plug in Coaster tracks into an extension cord as directed in photo below. You will notice these plugs are not marked. You may need to use provided extensions.
2. Plug in animated parts (cars with elves). First plug the controller into an extension cord. Each plug is marked either Green 1 or Red 2 or Yellow 3. Plug Green 1 male plugs (you should have 2 of these) into the controller plug marked Green 1. Plug the male plugs marked Red 2 into Red 2 on the controller. Plug the male plugs marked Yellow 3 into Yellow 3 on the controller.
3. Adjust speed to your liking

