

Elf Kissing Reindeer

Please check that you have all parts. (Located in attached bag)

- 4 ground stakes
- 1 pkg of asst. color clips (replacement)
- 2 Wingbolts
- 6 wing nuts
- 1 gray 1 point controller

Unfold display being careful not to stretch any attached wires. There are 2 hinges on the display. Attach two small metal plates at hinge together by screwing wing bolt into metal plates to hold up display. Attach ground stakes by placing them into the bottom provided slots and use wing nut to tighten. Push ground stakes gently into the ground. You can do this with your foot and using a back and forth motion to inch each side gradually into the ground. This item may need extra support which is not included.

1. Plug Deer section (unmarked plug) into and extension cord.
2. Plug the Girl Elf body into an extension cord. (unmarked plug on foot)
3. Plug controller into and extension cord.
4. There is a plug coming from the foot of the Girl and a plug coming from the hearts each labeled Green 1. Plug the Green 1 into the Green 1 on the controller. Plug the next Green 1 male plug into the back of first Green 1 (stack plugs).

Adjust speed to your liking

For the best look, straighten clips. Also, if you live in an area with lots of rain or snow, you may want to take extra precaution to cover your controllers.

