

# ELF PAINTING ORNAMENT INSTRUCTIONS


Unfold display being careful not to stretch any attached wires.

If there are hinges on the display, attach two small metal plates at hinge together by screwing wing bolt into metal plates to hold up display.

Attach ground stakes by inserting into tubes on bottom and secure with wing bolt.

Push ground stakes gently into the ground.

You can do this with your foot and using a back and forth motion to inch each side gradually into the ground.

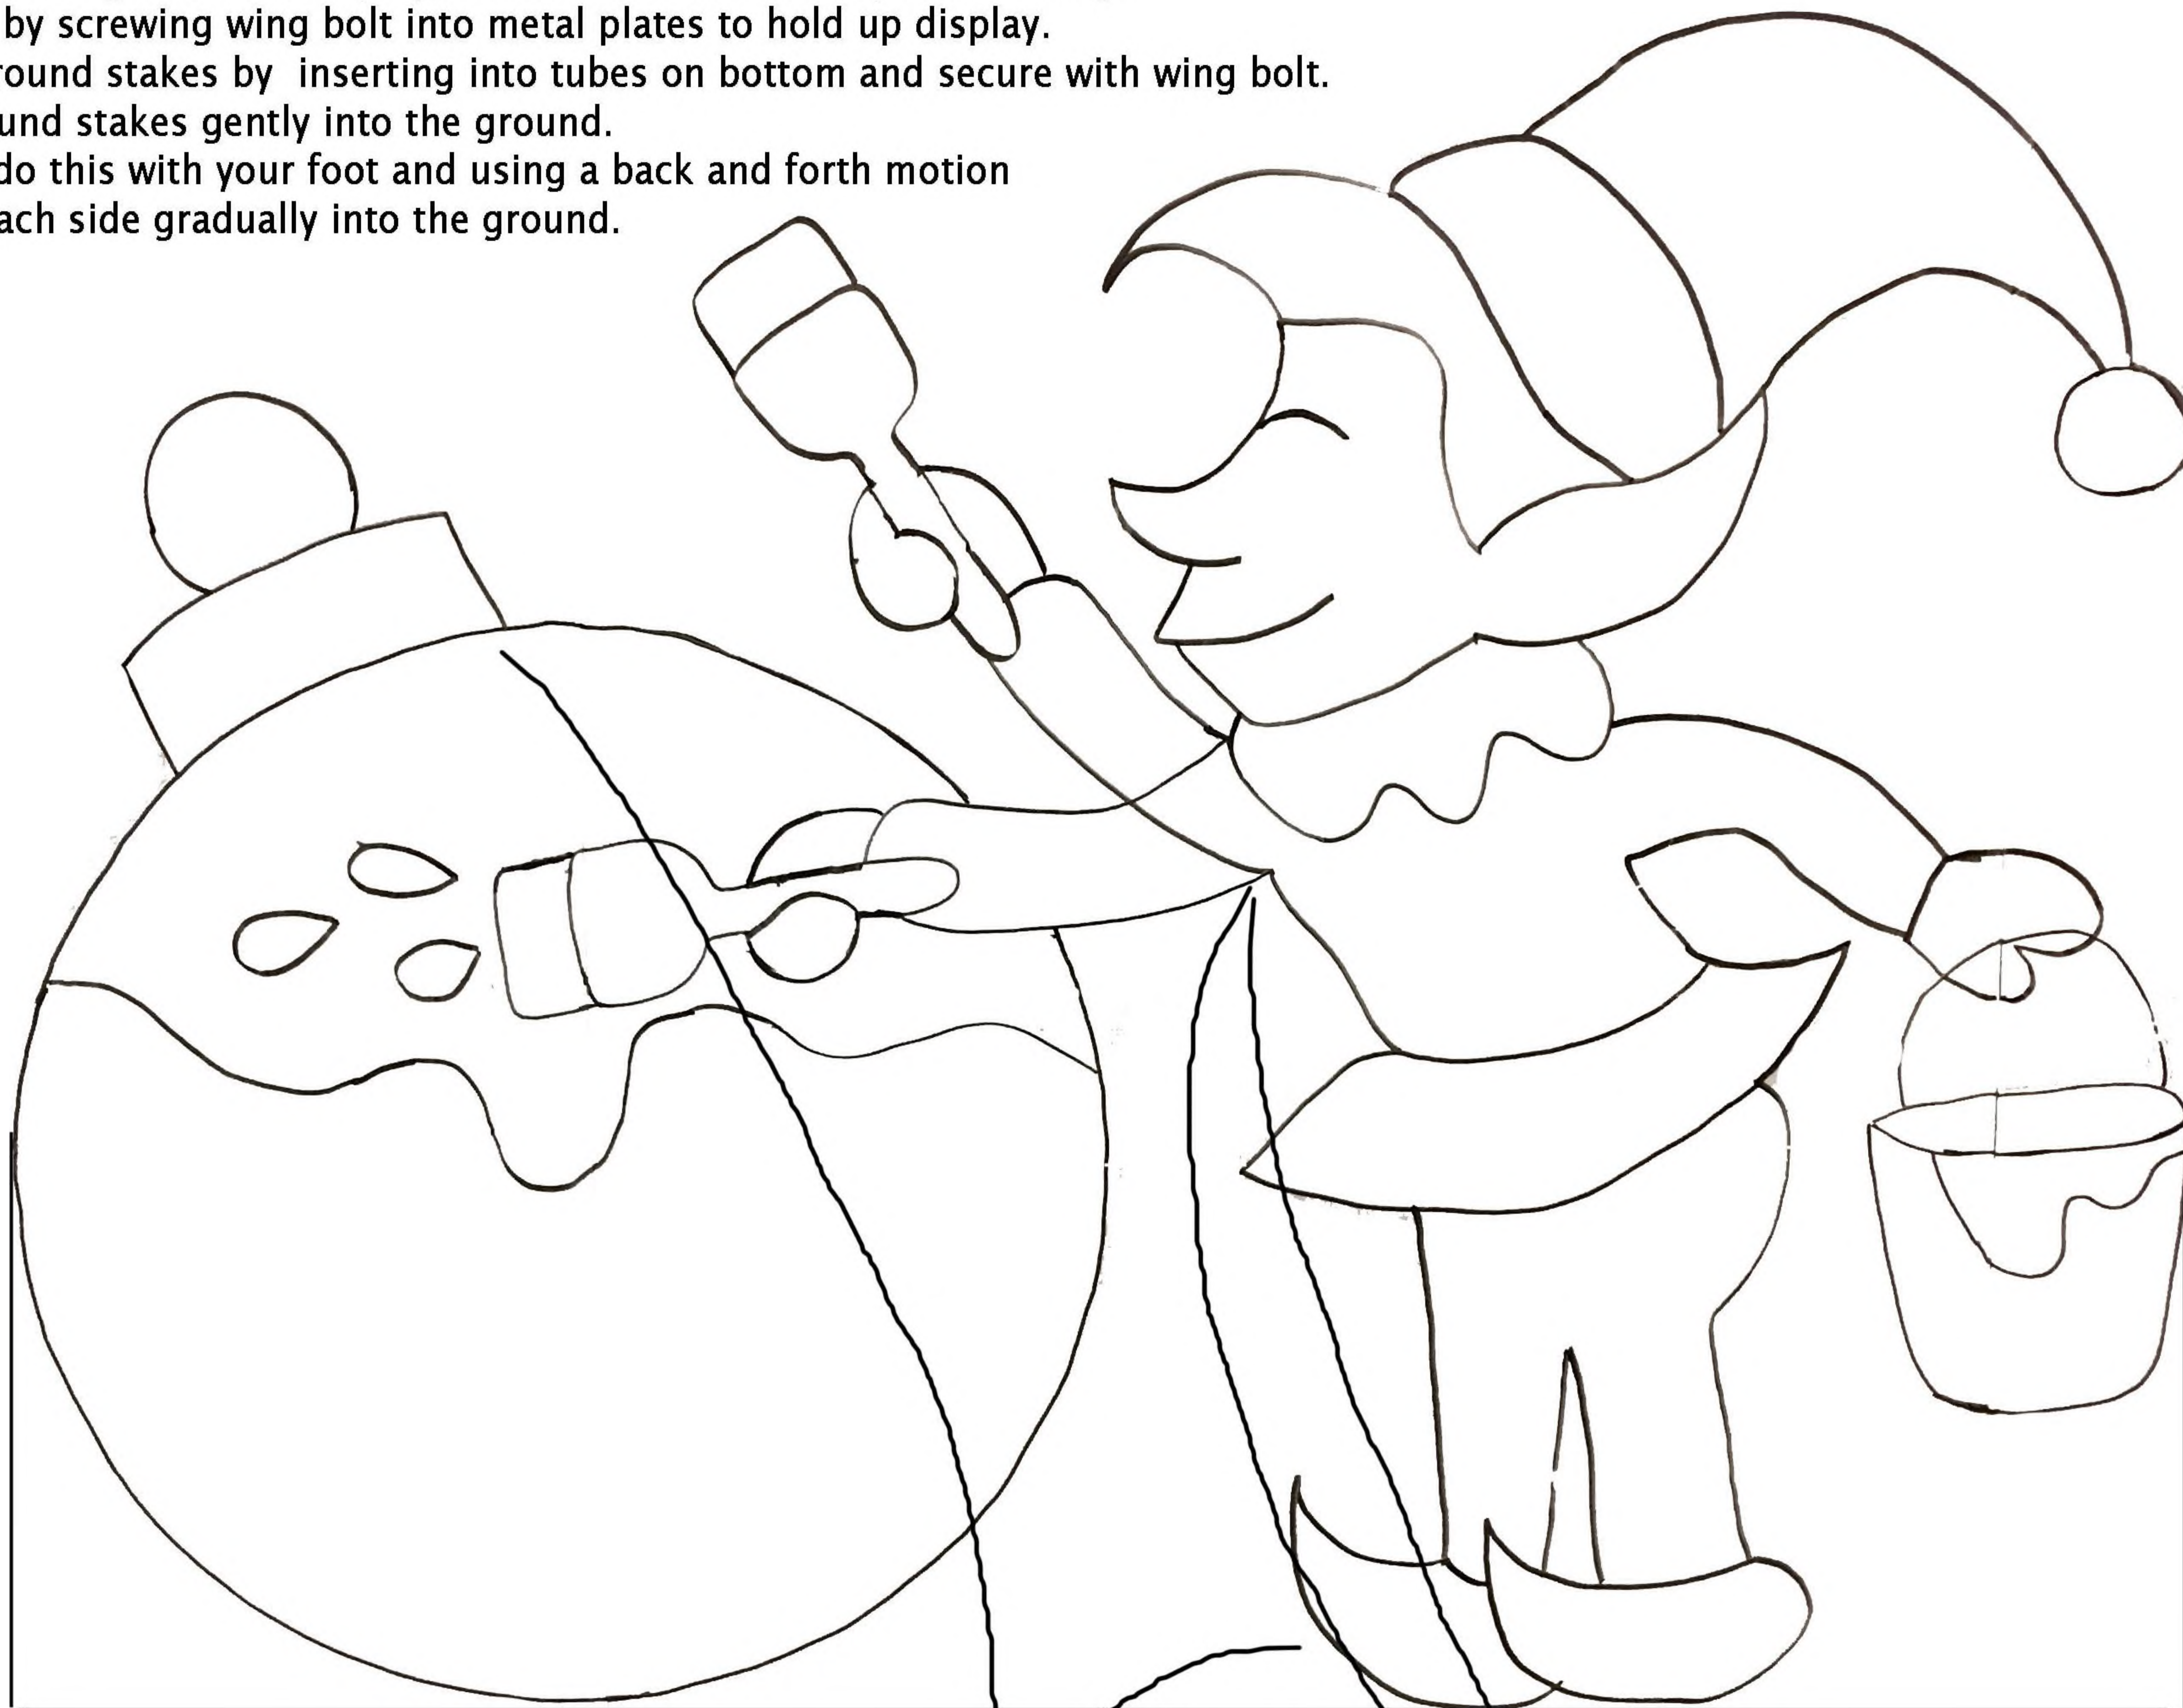

Parts :  
Please check that you have all parts.  
(Located in attached bag)


- 2 ground stakes and wing nuts
- 1 pkg of asst. color clips (replacement)
- 1 Wingbolt and wingnut
- 1 silver 2 point controller

Stack Plugs here

Adjust speed

Plug Green 1 to Green 1  
Plug Red 2 to Red 2

Controller

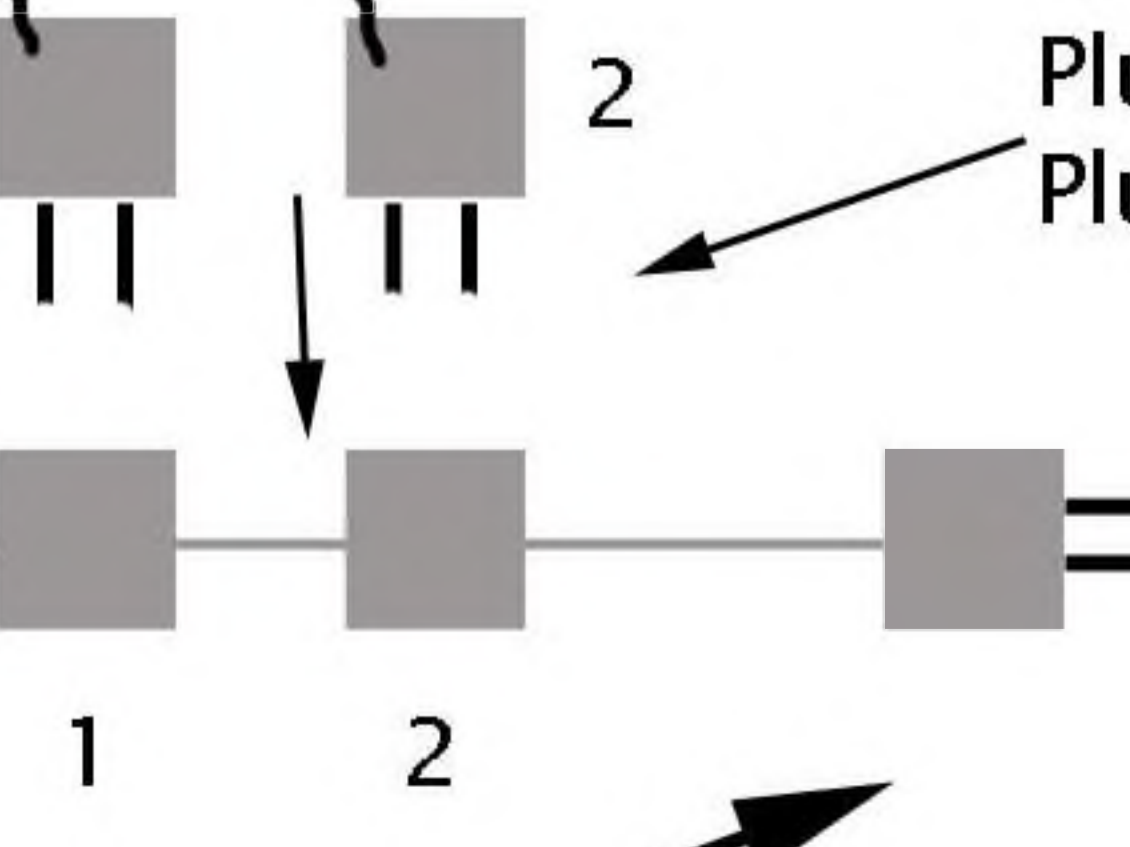

Plug to an extension Cord