

FIREFIGHTER ELF

Please check that you have all parts. (Located in attached bag)

- 3 ground stakes
- 2 wing bolts
- 5 wing nuts
- 1 pkg of asst. color clips (replacement)
- 1 silver 3 point controller

Unfold display being careful not to stretch any attached wires. There are two hinges on the display. Attach two small metal plates at hinges together by screwing wing bolt and nut into metal plates to hold up display. Attach ground stakes by placing them into the bottom provided slots and securing with a wing nut.

Push ground stakes gently into the ground. You can do this with your foot and using a back and forth motion to inch each side gradually into the ground. Plug Deer side (right) in an extension cord

1. Plug unmarked plug from Elf foot into extension cord.
2. There are 3 male plugs that come out of the water side that are marked either Green 1 or Red 2 or Yellow 3.
3. Plug the Green 1 into the Green 1 on the controller, Red 2 into the Red 2, Yellow 3 into the Yellow 3 .
4. Plug controller into extension cord.
5. Adjust speed to your liking

For the best look, straighten clips.

