

# GIRL CATCHING SNOWFLAKES

Please check that you have all parts. (Located in attached bag)

- 2 ground stakes
- 1 wing bolt
- 1 pkg. of asst. color clips (replacement)
- 1 gray 3 point controller

Unfold display being careful not to stretch any attached wires. Attach two small metal plates at hinges together by screwing wing bolt into metal plates to hold up display.

Attach ground stakes by screwing them into the bottom provided slots. You may need an adjustable wrench.

Push ground stakes gently into the ground. You can do this with your foot and using a back and forth motion to inch each side gradually into the ground. Girl Catching Snowflakes may possibly need extra support which is not included. You can do this with an extra stakes placed behind the display, driven into the ground, and tied to the frame using a twist tie or a cable tie.

1. First plug Girl into an extension cord (plug that is not marked)
2. Plug the controller into an extension cord.

The snowflake plugs are each marked Green 1, Red 2, Yellow 3. Plug the Green 1 into the Green 1 on the controller, Red 2 into the Red 2, and Yellow 3 into the Yellow 3. Adjust speed to your liking. For the best look, straighten clips. Also, if you live in an area with lots of rain or snow, you may want to take extra precaution to cover your controllers

