

LG WAVING SANTA

Please check that you have all parts. (Located in attached bag)

- 1 pkg. of asst. color clips (replacement)
- 1 wing bolt
- 2 ground stakes
- 1 gray 2 point controller

Unfold display being careful not to stretch any attached wires. Attach two small metal plates at hinges together by screwing wing bolt into metal plates to hold up display. Place ground stakes through sleeves on bottom of decoration, screw wing nuts on ground stakes

Push ground stakes gently into the ground. You can do this with your foot and using a back and forth motion to inch each side gradually into the ground. Santa may possibly need extra support which is not included. You can do this with an extra stakes placed behind the display, driven into the ground, and tied to the frame using a twist tie or a cable tie.

1. First plug the body of Santa (non- animated) part to an extension cord (not included).
2. Plug controller to an extension cord.
3. Each arm has a male plug which is labeled either Green 1 or Red 2 Plug the Green 1 into the Green 1 on the controller. Plug the Red 2 into the Red 2 on the controller. Adjust speed to your liking

For the best look, straighten clips. Also, if you live in an area with lots of rain or snow, you may want to take extra precaution to cover your controllers.

