

MRS. CLAUS

Please check that you have all parts. (Located in attached bag)


- 1 wing bolt / 3 wing nuts
- 1 pkg. of asst. color clips (replacement)
- 1 Gray 2 point controller
- 2 ground stakes

Unfold display being careful not to stretch any attached wires. Attach two small metal plates at hinges together by screwing wing bolt into metal plates to hold up display. Mrs. Claus may possibly need extra support which is not included. You can do this with an extra stake placed behind the display, driven into the ground, and tied to the frame using a twist tie or a cable tie.

Attach ground stakes by screwing them into the bottom provided slots. You may need an adjustable wrench. Push ground stakes gently into the ground. You can do this with your foot and using a back and forth motion to inch each side gradually into the ground.

1. Plug Mrs. Claus body into an extension cord.
2. Plug the controller into an extension cord. (Not included.) There are two plugs coming from the arms each marked Green 1 and Red 2. These plugs also have a silver dot on one side. The controller also has a silver dot. Make sure dots are on the same side.
3. Plug Green 1 into Green 1 on the controller. Plug Red 2 into Red 2 on the controller. Adjust speed to your liking.

For the best look, straighten clips. Also, if you live in an area with lots of rain or snow, you may want to take extra precaution to cover your controllers.

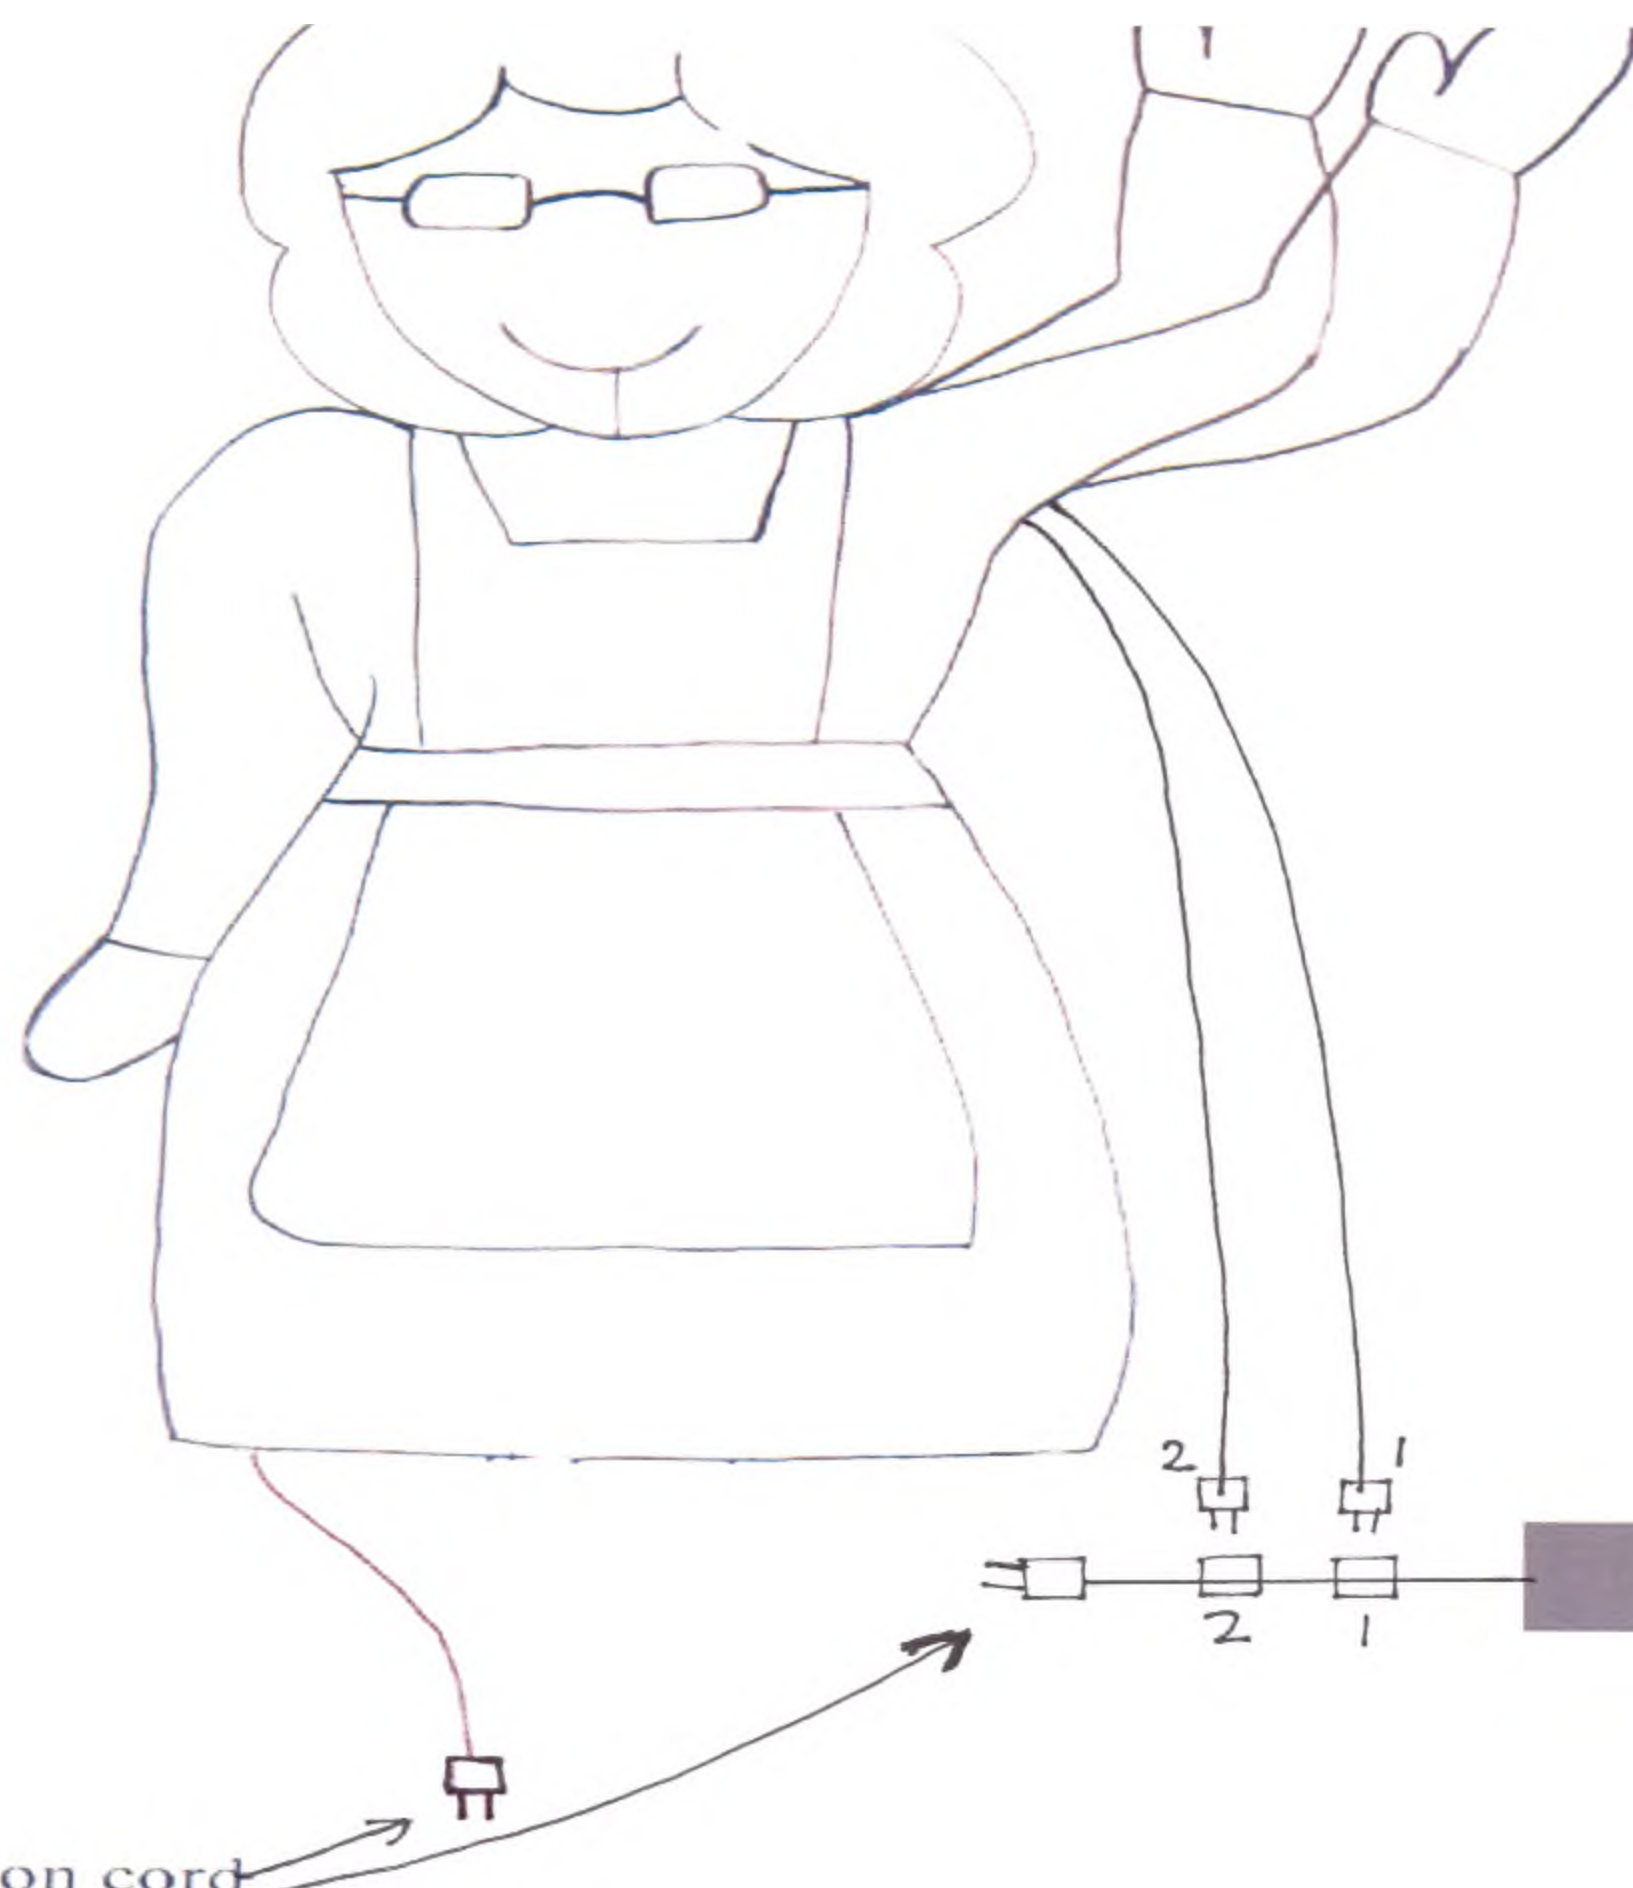

Plug to extension cord