

NAUGHTY NICE ELF

Please check that you have all parts. (Located in attached bag)

- 4 ground stakes- 2 short and 2 long
- 1 pkg. of asst. color clips (replacement)
- 1 gray 2 point controller (may be already attached)

Attach ground stakes by screwing them into the bottom provided slots. You may need an adjustable wrench.

1. Push ground stakes gently into the ground. You can do this with your foot and using a back and forth motion to inch each side gradually into the ground.
2. Plug Elf body (not arms) into an extension cord. (Not provided).
3. Plug controller into an extension cord.
4. There are 2 plugs coming from the arms are labeled Green 1 and Red 2. Plug the Green 1 into the Green 1 on the controller. Plug the Red 2 into the Red 2 on the controller.
5. Naughty Nice has 2 male plugs each labeled Green 1 or Red 2. Plug Green 1 into the back of plug Green 1 from the elf arm (stack plugs), then plug Red 2 into the back of the Red 2 arm.

Adjust speed to your preference.

For the best look, straighten clips. Also, if you live in an area with lots of rain or snow, you may want to take extra precaution to cover your controllers.

